


1. TRIM PLASTIC OFF CABLE.
2. FILL LUG WITH HOT SOLDER AND PUSH CABLE INTO LUG AND LET COOL.

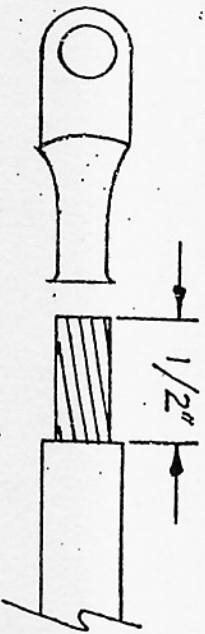

3. CUT HEAT SHRINK 1 1/2" LONG AND SLIDE OVER THE LUG AND MELT.

TO STARTER SOLENOID
OR SWITCH PANEL

BATTERY CABLE KIT

Part #3711

Bill of Materials:

- 1.....#4 Battery Cable Black (25) #3711-1
- 10....#4 x 3/8" Cable Ends #3711-2.
- 3....6" x 1/2" Heat Shrink Tube #3711-3
- 10....#4 Adel Clamps #3711-4